



Updating the device drivers for the USB to Serial Interface

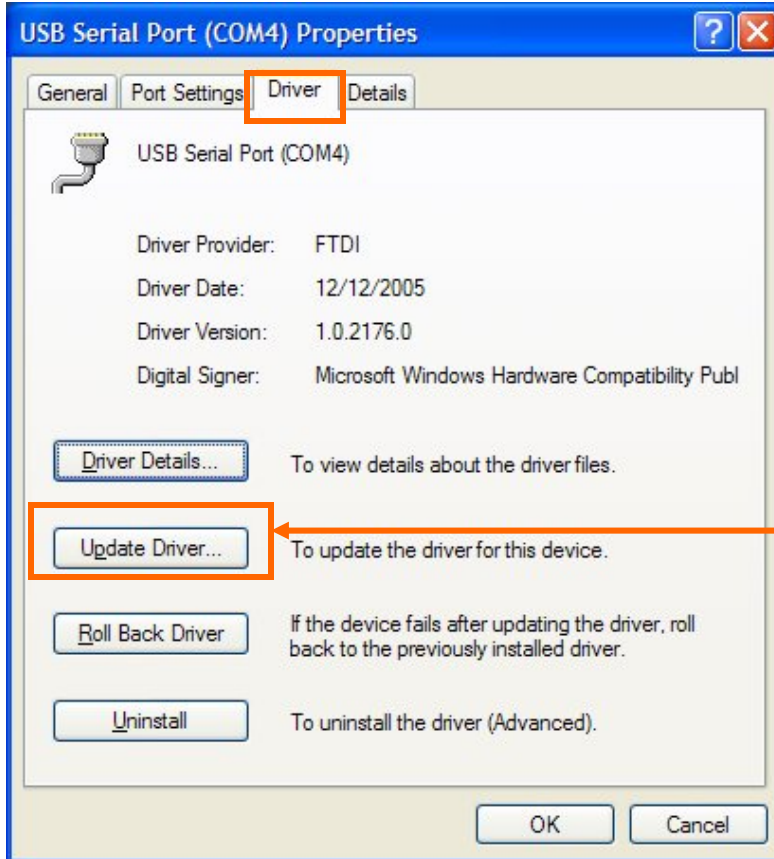


From the **Driver** tab in the **USB Serial Port (COM4) Properties Page**, click on the **Update Driver** button...




The **Hardware Update Wizard** screen will then appear. From here, select '**Install from a list or specific location**' and click **next**...

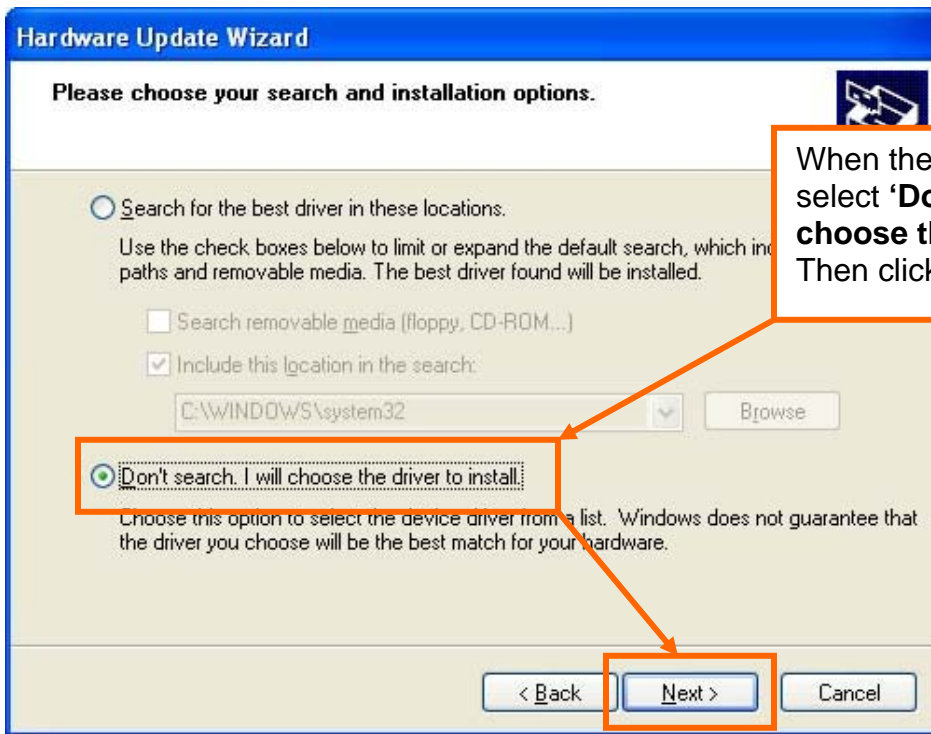


When the next screen appears, select **'Don't search. I will choose the driver to install.'** Then click **next...**

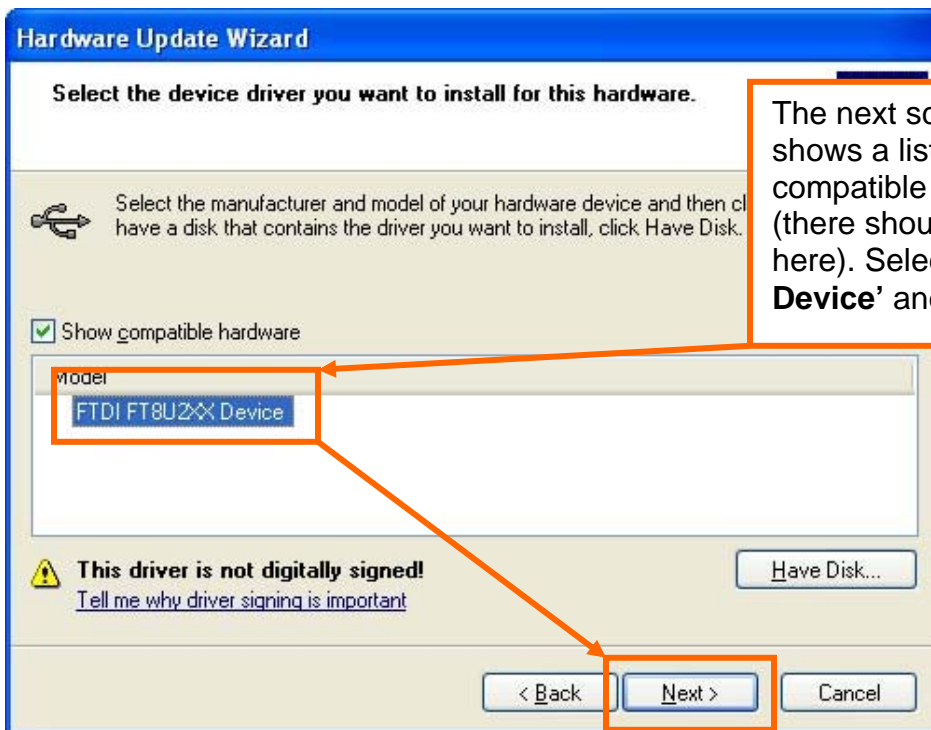


The next screen that appears shows a list of drivers that are compatible with your hardware (there should only be one entry here). Select **'FTDI FT8U2XX Device'** and click **next...**

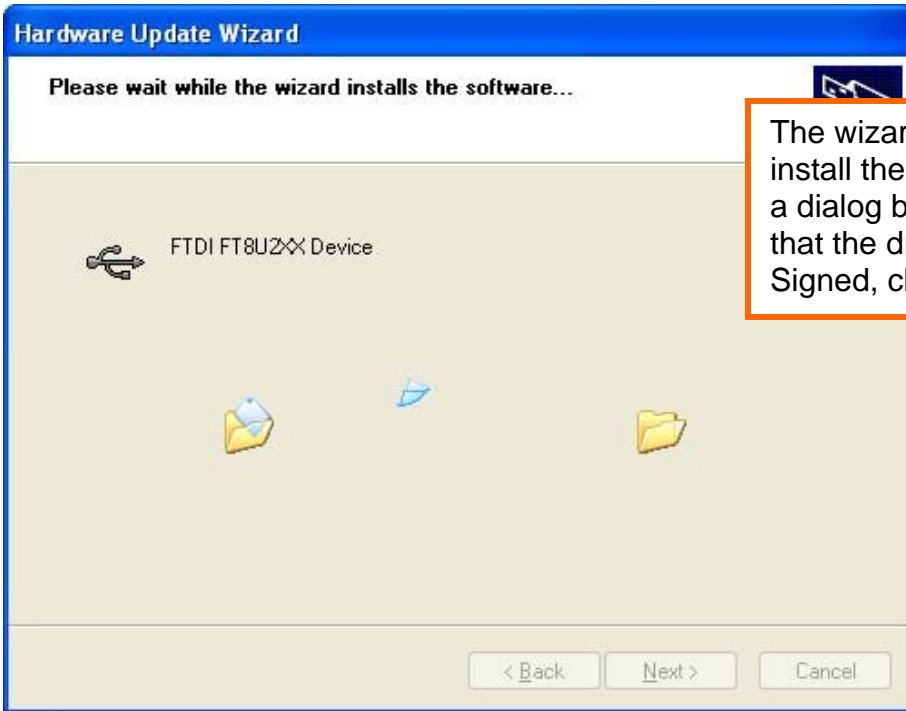

The wizard should automatically install the correct driver, however, if a dialog box comes up telling you that the driver is not Digitally Signed, click '**Continue Anyway**'...

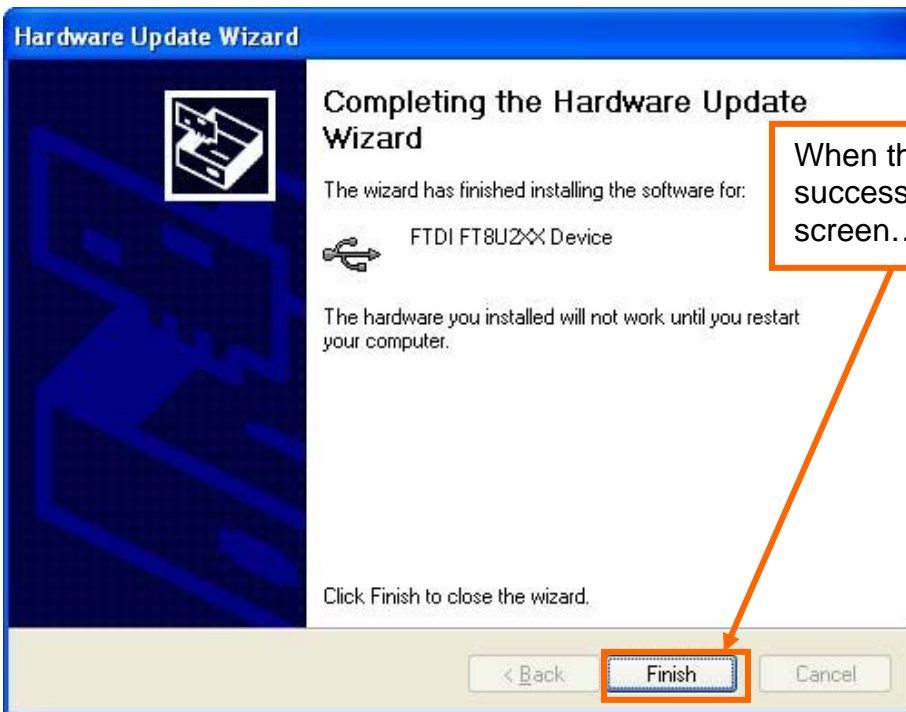


When the driver installation is successful, you should see this screen... Click **Finish**...

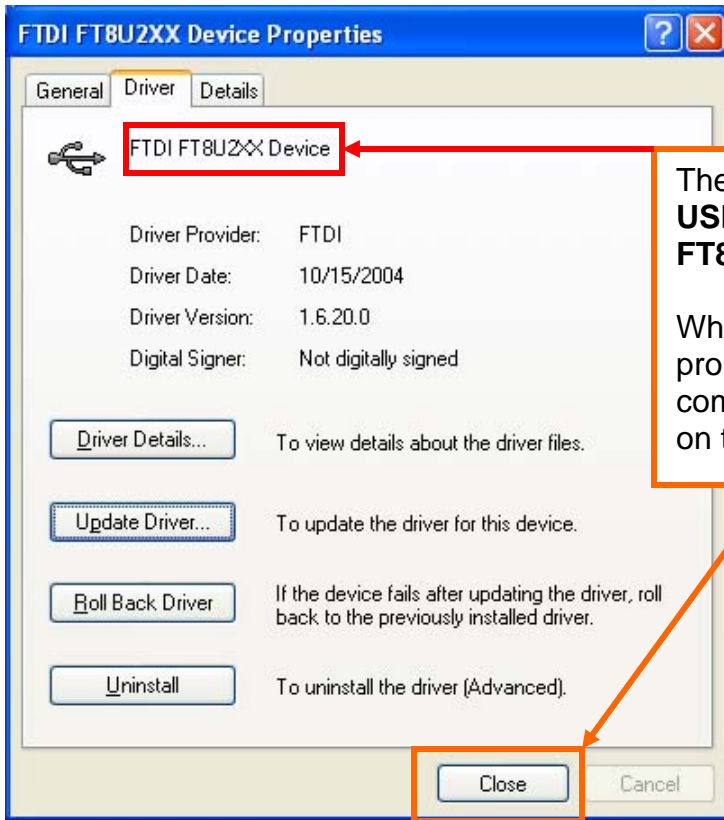

The device should no longer be called **USB Serial Port (COM4)**, but '**FTDI FT8U2XX Device**' instead...

When you click close, you may be prompted to restart your PC. This is not compulsory, but it is **recommended** to be on the safe side.

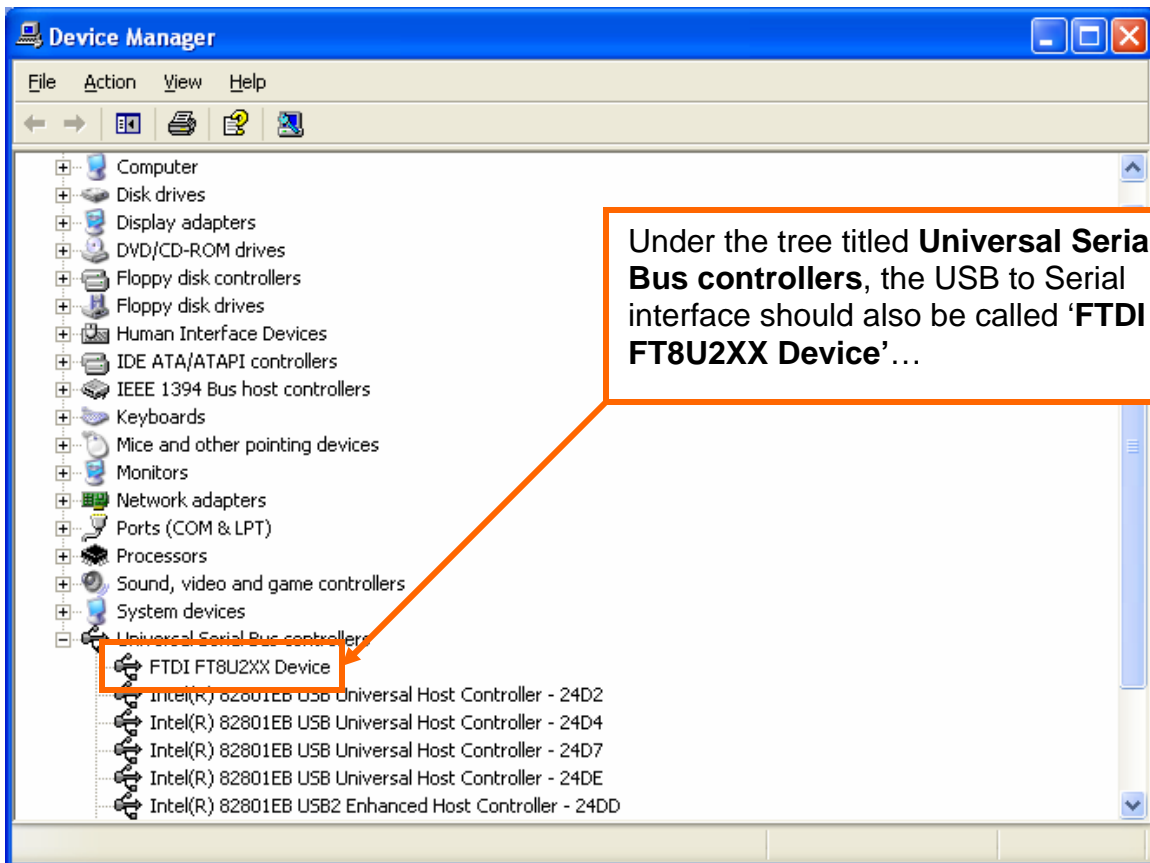

Under the tree titled **Universal Serial Bus controllers**, the USB to Serial interface should also be called '**FTDI FT8U2XX Device**'...